



ENVIRO-DUO-(OS)

ENVIRO-DUO-(+OS)
 Schrauben zu Pos 48
 2 Stk Schr. M3 x 20 u.
 Unterlagen
 2 Stk M3 x 10

ENVIRO-DUO-OS
 Schrauben zu Pos 50
 4 Stk Blech-Schr.
 ø 2.5 x 12.5

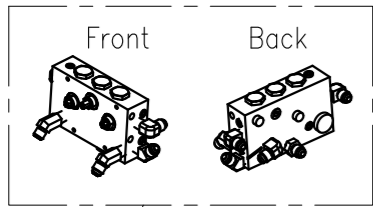

Control Valve(as a spare part)

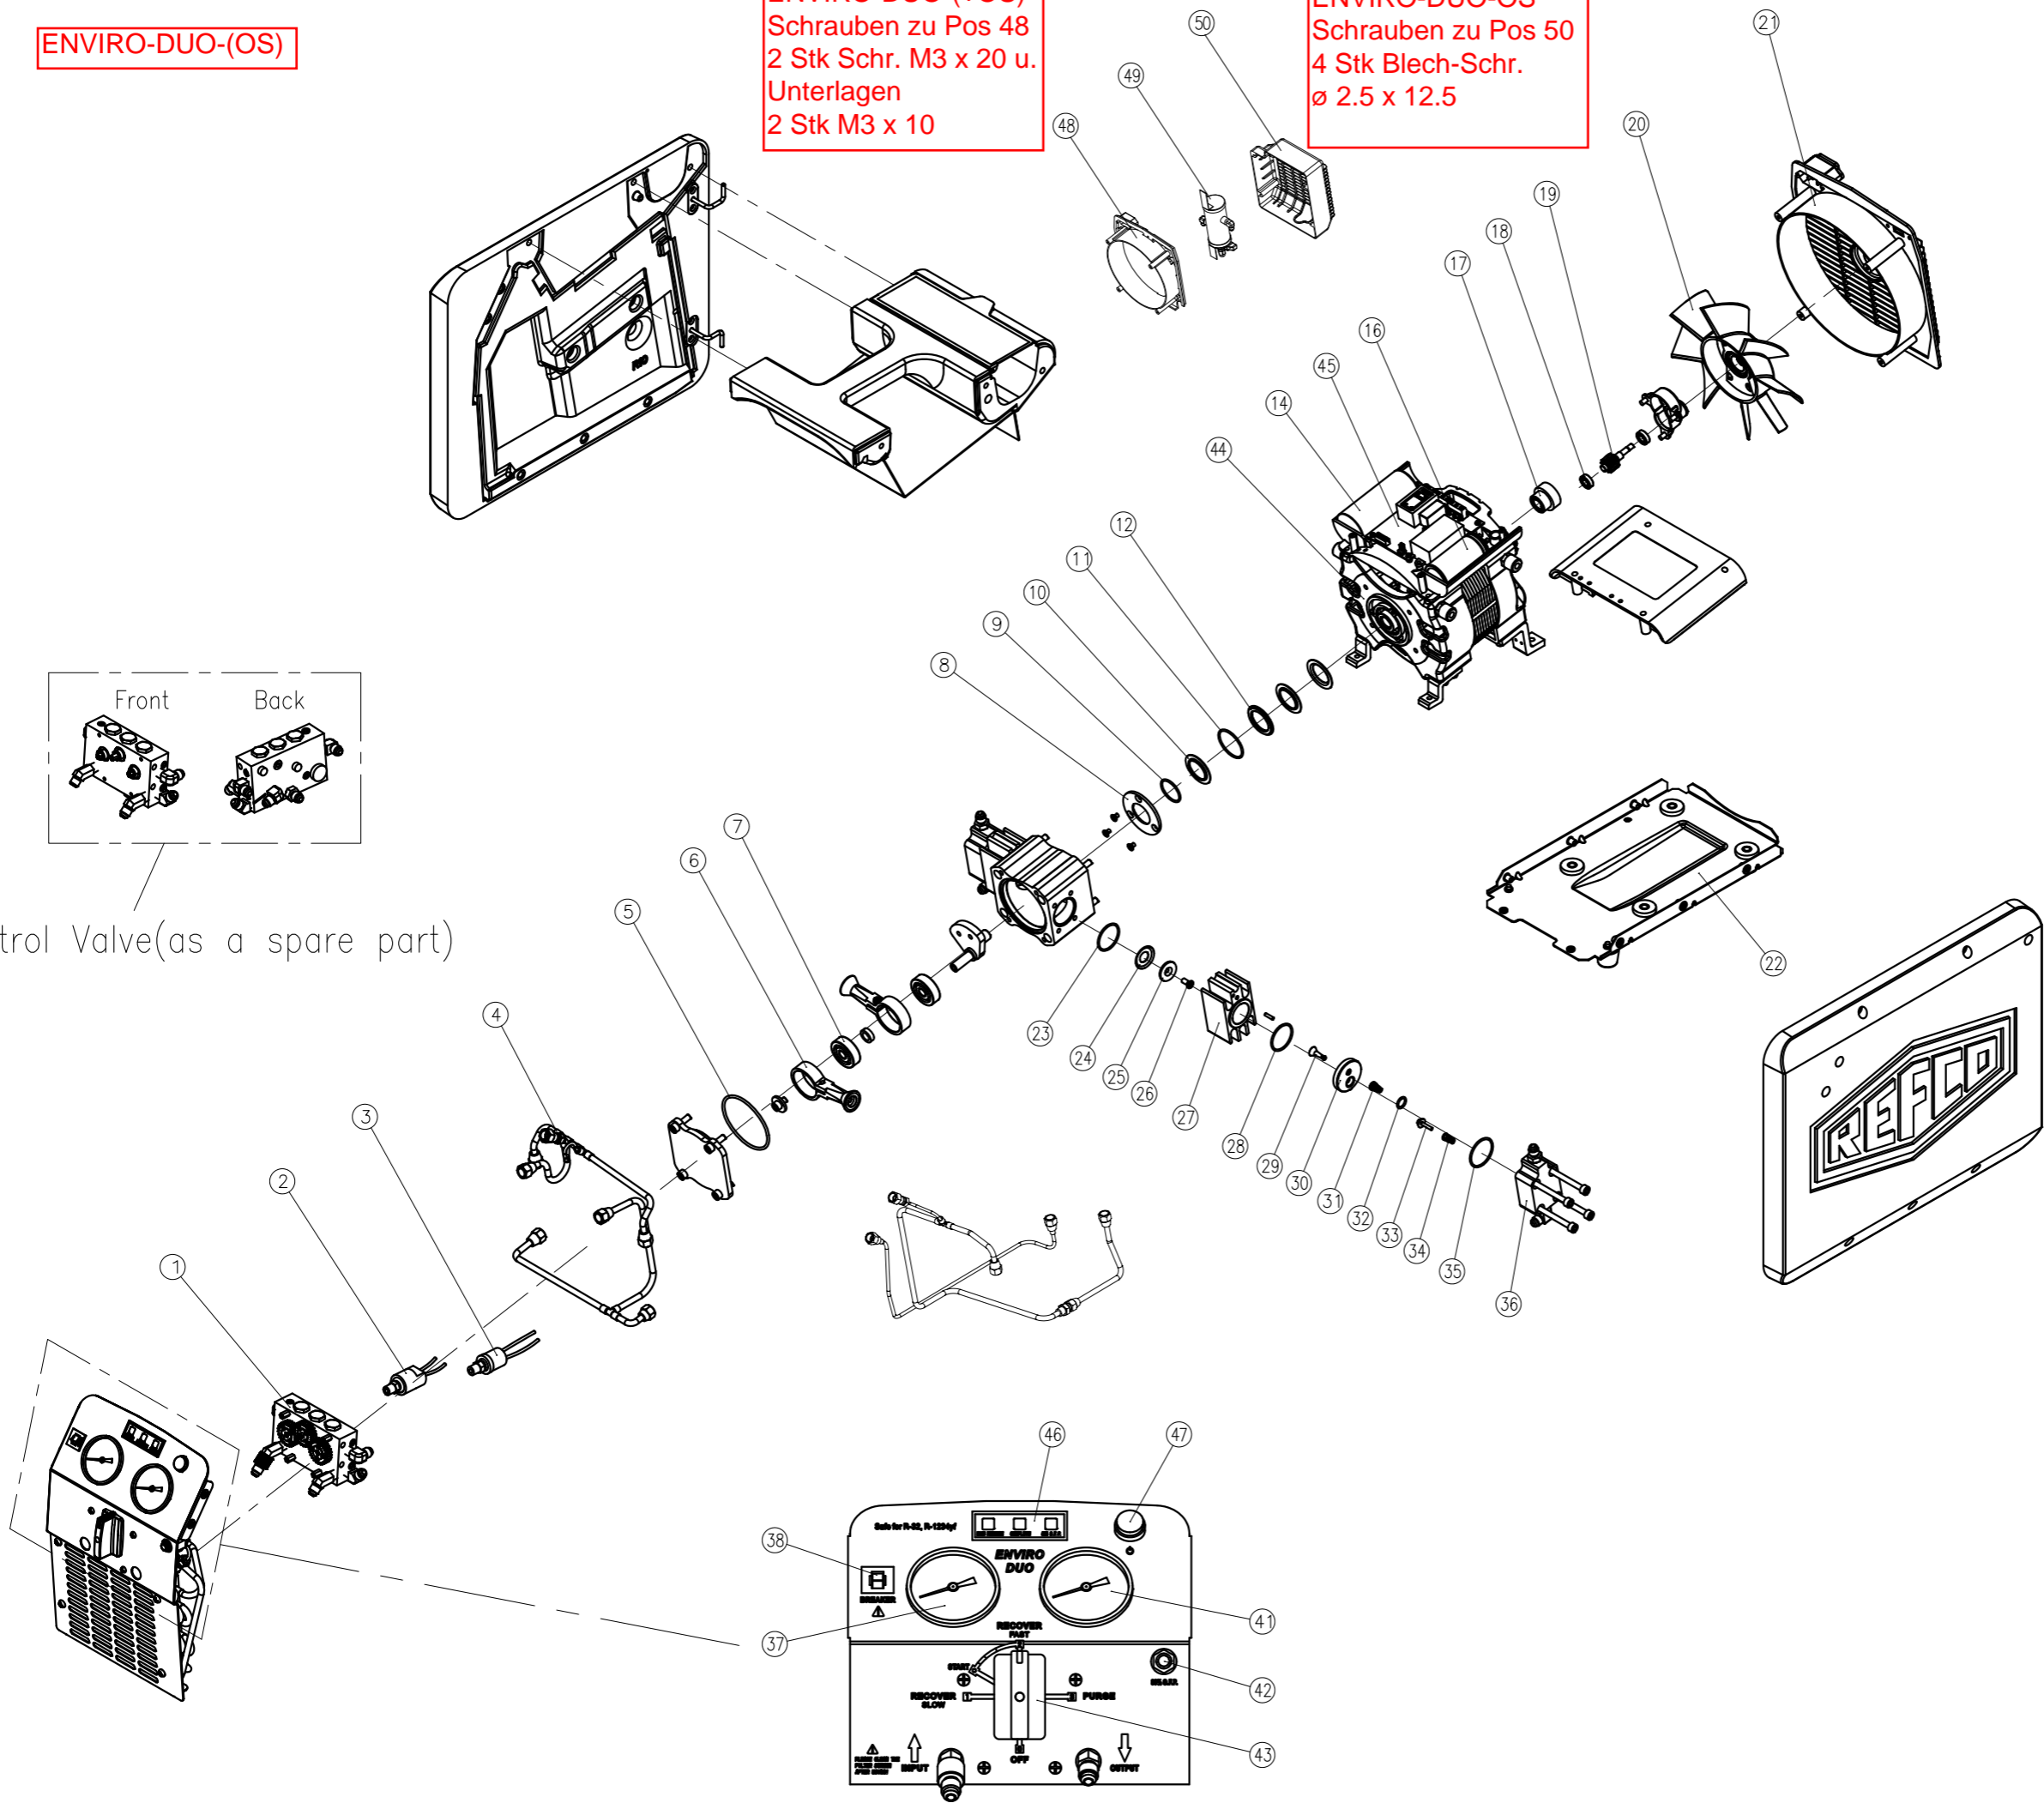

Spare Parts	
No.	Name
1	Control Valve
2	Low Pressure Switch
3	High Pressure Switch
4	Copper Pipes
5	O Ring (φ67×φ2.65)
6	Connecting Rob
7	Ball Bear 6202-2Z
8	Seal Plate
9	O Ring (φ26.7×φ1.8)
10	Seal Ring
11	O Ring (φ34.6φ1.8)
12	Seal Board
14	Running Capacitor
16	Starting Capacitor
17	Motor Gear
18	Ball Bear
19	Gear Shaft
20	Fan
21	Fan Cover
22	Base
23	O Ring (φ30×φ1.8)
24	Piston Ring
25	Piston Ring Plate
26	Screw(M5×14, Stainless steel)
27	Cylinder
28	O Ring (φ30×φ1.8)
29	Intake Valve Core
30	Valve Seat
31	Intake Valve Spring
32	O Ring (φ10.8×φ1.8)
33	Exhaust Valve Core
34	Exhaust Sping
35	O Ring (φ32.5×φ1.8)
36	Cylinder Cover
37	Input Gauge
38	Circuit Breaker
41	Output Gauge
42	OFF Socket
43	Aluminum Knob
44	Motor
45	Circuit board
46	Indication Light
47	Start Button
48	Oil Separator Fan
49	Oil Separator
50	Oil Separator Back Cover