



Spare Parts	
No.	Name
1	Control Valve
2	Low Pressure Switch
3	High Pressure Switch
4	Copper Pipes
5	O Ring ($\phi 67 \times \phi 2.65$)
6	Connecting Rob
7	Ball Bear 6202-2Z
8	Seal Plate
9	O Ring ($\phi 26.7 \times \phi 1.8$)
10	Seal Ring
11	O Ring ($\phi 34.6 \times \phi 1.8$)
12	Seal Board
13	Motor
14	Running Capacitor
15	Circuit board
16	Starting Capacitor
17	Motor Gear
18	Ball Bear
19	Gear Shaft
20	Fan
21	Fan Cover
22	Base
23	O Ring ($\phi 30 \times \phi 1.8$)
24	Piston Ring
25	Piston Ring Plate
26	Screw (M5x14, Stainless steel)
27	Cylinder
28	O Ring ($\phi 30 \times \phi 1.8$)
29	Intake Valve Core
30	Valve Seat
31	Intake Valve Spring
32	O Ring ($\phi 10.8 \times \phi 1.8$)
33	Exhaust Valve Core
34	Exhaust Sping
35	O Ring ($\phi 32.5 \times \phi 1.8$)
36	Cylinder Cover
37	Input Gauge
38	Circuit Breaker
39	Power Switch
40	Indication Light
41	Start Button
42	Output Gauge
43	OFP Socket
44	Aluminum Knob