

## Installation guide

## Solenoid valve


Type EVR 25 (Version 2)


NC solder Max. working pressure EVR solder: 45.2 bar. Refrigerants R22/R407C, R134a, R404A/R507, R410A, R407A, R407F, R125, R152A, R448A, R449A, R452A, and R450A. For complete list of approved refrigerants, visit www.products.danfoss.com and search for individual code numbers, where refrigerants are listed as part of technical data. Note, please follow specific selection criteria stated in the datasheet for these particular refrigerants. Max. working pressure in bar in relation to media temperature in °C. Media temperature:  $-40 \,^{\circ}\text{C} / -40 \,^{\circ}\text{F} - 105 \,^{\circ}\text{C} / 221 \,^{\circ}\text{F}$ Max. opening diff. pressure (MOPD): Coil dependent Mounting Mounting angle Max. 150 °C / 300°F Max. 700 °C / 1300 °F ID Marking - example Valve identification and reference to UL listed coils **Danfoss** MADE IN DENMAN...
Type BJ120CS
e part no. 018F4110
120V 60Hz 15W
V 50Hz 16W
...ith listed valve body
...FV2xx serie Always disconnect power from the 110-120V 110V coil when dismounted from the valve. The coil may be damaged and there is risk of injuries and burns. Coil print Click! Click! Recommended to reduce O-ring vibrations, not mandatory required for sealing




22.5

## Disassembly and assembly of EVR version 2

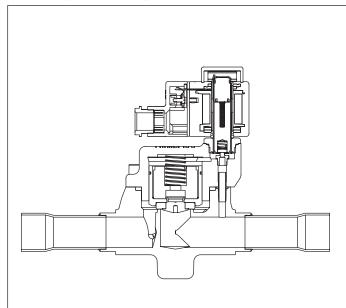

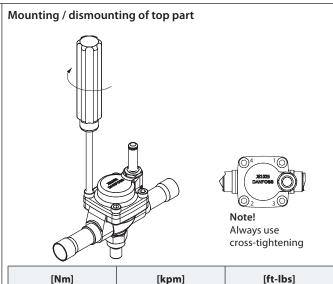

3.0

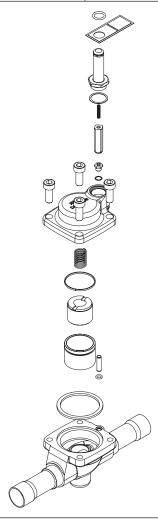

30



## Manual operation for pressure testing and service related operation:

Only use the manual stem operation of the EVR NC valve during initial pressure testing of the refrigeration system or during service related manual operation. Remove the protective cap and rotate the manual stem clockwise approx. 6 cycles from fully closed to fully open position. After the manual operation is completed, ensure to rotate the manual stem counter-clockwise back to fully closed position and re-mount the protective cap before connecting the valve to automatic operation. MOPD for the manual operation function is 5 bar. Alternatively, all EVR NC and NO valves can be manually operated by removing the coil and force the valve open or closed by using a solenoid valve tester (permanent magnet).